

Snow Guard Installation Using Sealant

1. Prepare Snow Guard Location on Roof.

- a. Mark each location where Snow Guards will be placed.
- b. Rub (not enough to remove paint) each roof locations with Scotch-Brite Pads.
- c. Wipe off each Snow Guard Location with clean rags.
- d. Using denatured alcohol clean each of the Snow Guard locations.
- e. Wipe off each Snow Guard Locations with clean rags.

2. Prepare Under Side of Snow Guards

(If Guards are New Design with raised bumps on back side skip this step)

- a. Rub the underside of each Snow Guard with Scotch-Brite Pads.
- b. Wipe off each guard with clean rags
- c.

3. Apply Sealant and Affix Snow Guards to Roof

- a. Apply at least 5 beads of sealant at least 1/8" in thickness on underside of Snow Guard.
- b. Press Snow Guard firmly down onto prepared site downward onto roof.
- c. Use palate knife or another tool to remove excess sealant.

Spacing Instructions

We are always willing to help with Snow Guard Spacing Instructions! Ask Us!

You can either **contact us by telephone, email or reach out via the contact section of our website!**

If our spacing and Installation instructions are not followed, we cannot guarantee the snowguards will work properly and stay adhered.

Zaleski Snow Guards for Roofs Inc
100 Production Ct
New Britain, CT 06050

Telephone: 860-225-1614
Email: info@snowguards.com
Website: www.snowguards.com

Note: Zaleski Snow Guards for Roofs Inc., does not provide installation services, has no control over installation and is therefore not responsible for failures of sealant or faulty installation.